



## Connecting Your C4205

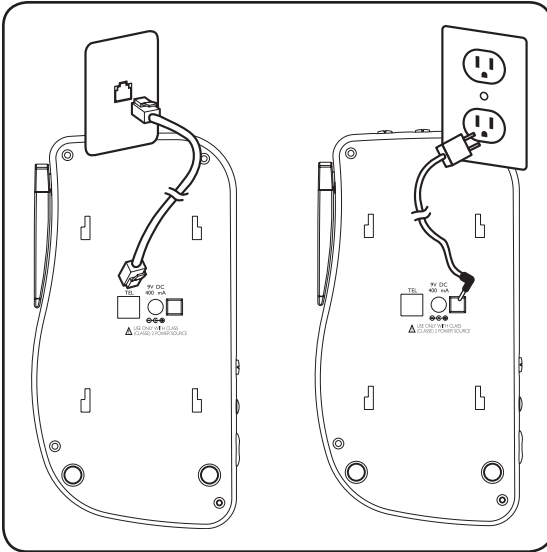

1. Plug the line cord into the base of the telephone and then into a standard phone jack.

2. Plug the AC adapter into the base of the telephone and then directly into a power outlet.

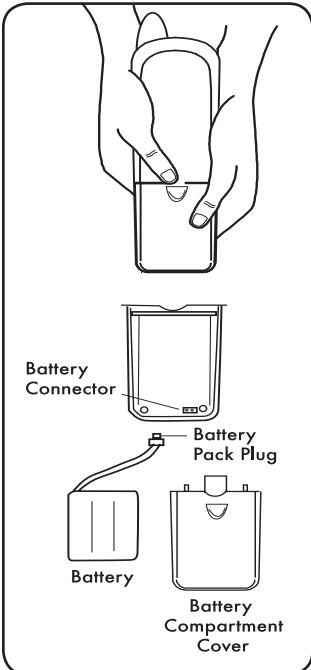

## Installing the Handset Battery

1. Remove battery cover
2. Install new battery
3. Connect battery pack
4. Remove battery cover
5. Charge for 12 hours before first use

Note: The battery in the handset must be fully charged for 12 hours before using the telephone for the first time.

## Battery Life

Talk Time: about four (4) hours

Standby Time: about eight (8) days

## Placing a Call

1. Press the TALK button and dial the number you wish to call.
2. To end the call, press the TALK button or place the handset in the base.

## Answering a Call

If the handset is out of the base, press the TALK button. If the handset is in the base, simply lift the handset to answer the call.

## Activating Digital Clarity Power™

To increase the volume and clarity of your call, press the BOOST button on the side of the telephone handset. Then use the volume dial to customize the volume to your desired level.

## Tone Control

Adjusting the TONE switch allows you to customize your hearing experience. Since we all have different hearing needs, we suggest exploring each setting to find the one most comfortable for you.

## Memory Dial Buttons

The C4205 has three (3) one-touch and ten (10) two-touch memory dial storage locations. To store a number:

1. Press the MEM button.
2. Enter the telephone number you wish to store.
3. Press the MEM button.
4. Press either a number on the dial pad or one of the three help buttons.
5. A long beep will indicate the number has been saved.

## Channel Operation

The C4205 automatically selects the clearest of 40 channels each time it is used. Because the 2.4GHz frequency is used for other types of devices, such as microwaves and wireless routers, interference is possible. If interference develops on the line, press the CHANNEL button to find a clearer signal.

## Handset Ringer

Set the switch marked Ringer OFF/VIBE/ON on the side of the handset. When set to VIBE, the handset will ring and vibrate to indicate incoming calls.